Section 3

Parts Lists

PL 1 Covers ***3-2***

PL 2 Frame Assembly ***3-4***

PL 3 Multi-Purpose Tray ***3-6***

PL 4 Laser Assembly, Exit Assembly, Print Cartridge ***3-8***

PL 5 Fuser Assembly ***3-10***

PL 6 Main Drive Assembly ***3-12***

PL 7 Systems Controller and Electronics ***3-14***

PL 8 Pickup Assembly (Bottom View) ***3-16***

PL 9 Paper Tray, Upper ***3-18***

PL 10 Lower Paper Tray Frame and Paper Tray (Option) ***3-20***

Tools, Kits, and Expendables ***3-22***

PL 1 Covers

Item	Part Number	Description
1)	--	Main Cover Assembly (Includes items 2-15)
2)	--	Front Cover
3)	38N00285	Stacker Back Stop
4)	--	Lever
5)	--	Window LED PWB
6)	--	Button Panel LED
7)	--	Main Cover
8)	120N00304	Multi-Purpose Tray Empty Lever
9)	--	Static Brush
10)	--	Exit Lock
11)	--	Exit Guide
12)	3N00706	Exit Stopper (4 per order)
13)	2N01619	Exit Cover Assembly
14)	--	Cover Opener Button
15)	--	Systems Controller Cover
16)	123N00186	LED Panel PWB
17)	--	Panel Cap

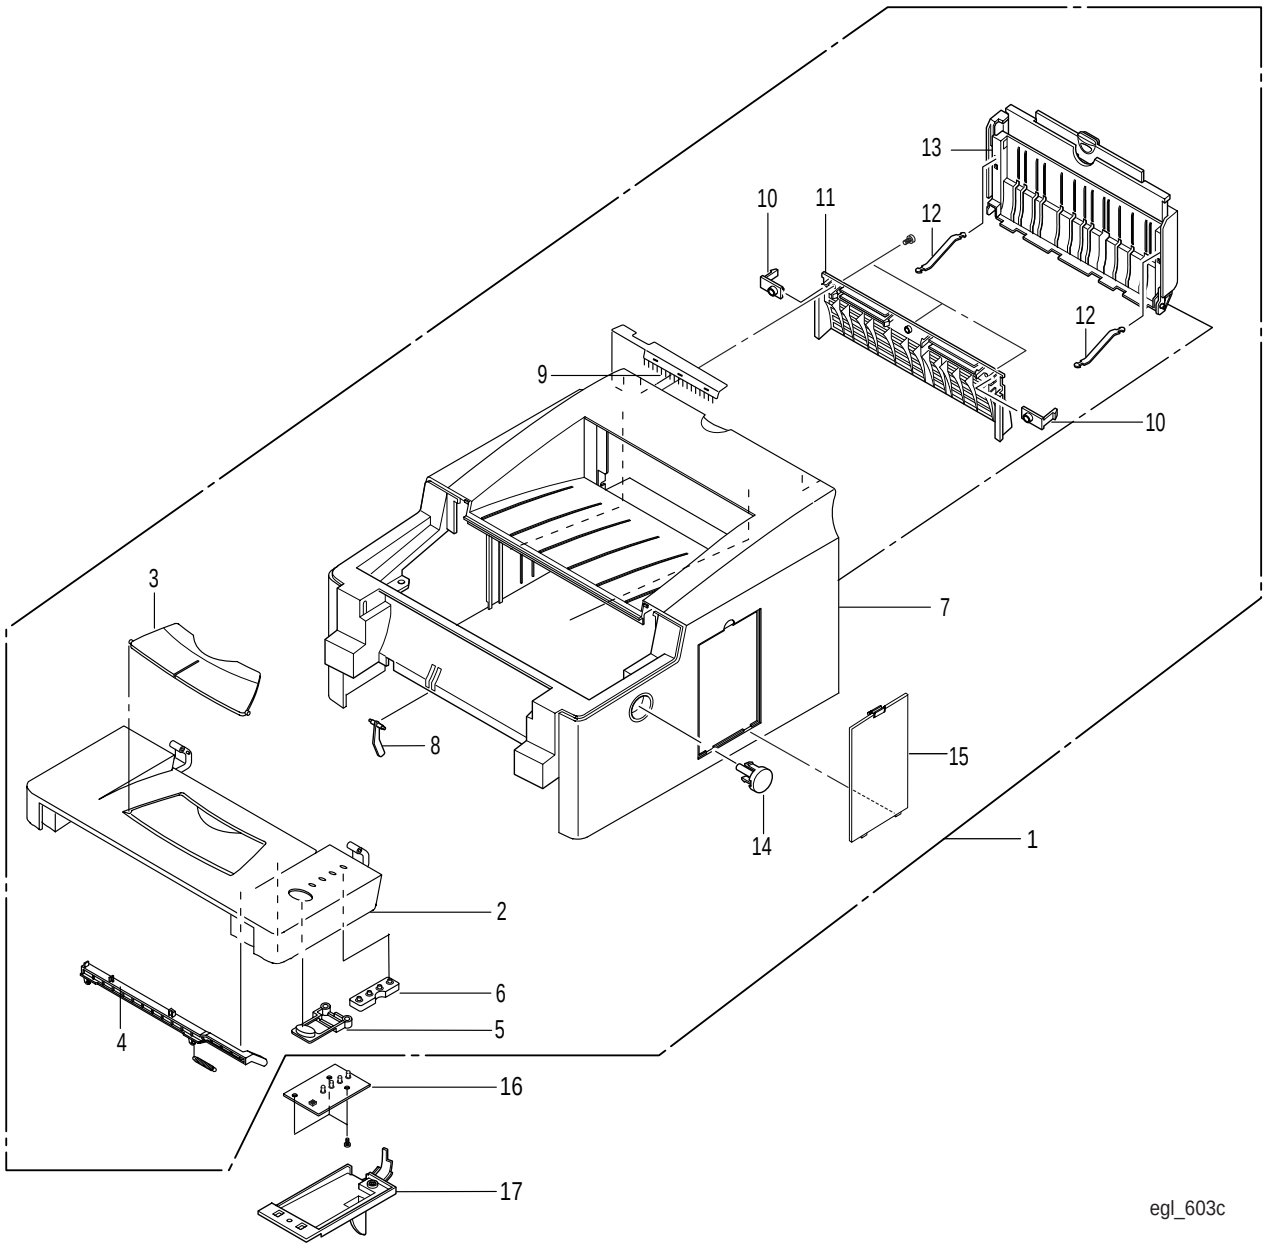
13
10
11
12
12
9
10
3
7
8
15
14
1
2
6
5
4
16
17
egl_603c

PL 2 Frame Assembly

Item	Part Number	Description
1)	--	Frame Assembly
2)	120N00301	Actuator
3)	130N00906	Cleaning Sensor
4)	120N00303	Paper Empty Actuator
5)	120N00302	Feed Actuator
6)	--	Multi-Purpose Plate Drive Bracket
7)	127N01006	DC Fan
8)	110N00828	Off/On Switch
9)	113N00310	Left Transfer Holder Bracket
10)	113N00311	Right Transfer Holder Bracket
11)	22N01021	Transfer Roller
12)	7N00776	Transfer Gear
13)	--	Wire Shield
14)	--	Systems Controller Shield
15)	--	Simm Cover
16)	130N00900	Cover Open Sensor
17)	38N00284	Transfer Guide Bracket Assembly
18)	130N00907	Thermistor Housing
19)	007N00774	Multi-purpose Tray Drive Bracket
20)	140N05245	Cleaning PWB

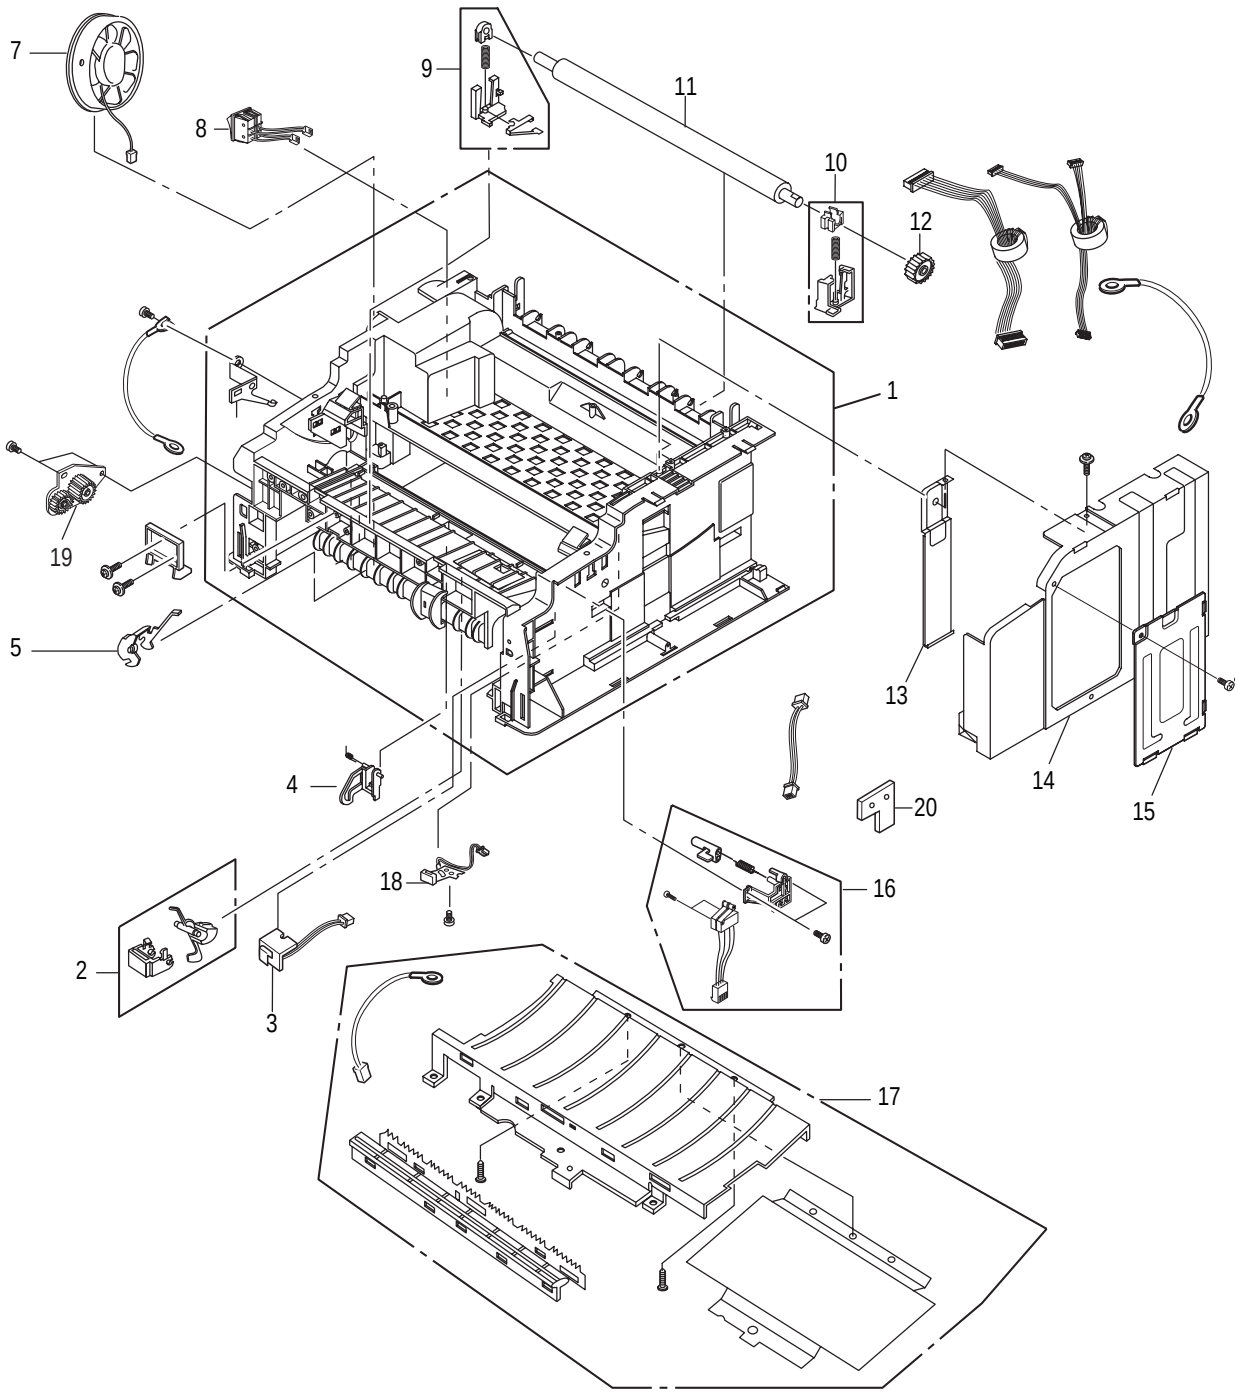

egl_602e

PL 3 Multi-Purpose Tray

Item	Part Number	Description
1)	11N00410	Multi-Purpose Tray Assembly (Includes items 2-4)
2)	--	Tray Cover
3)	--	Output Tray
4)	3N00706	Tray Stoppers (4 per order)
5)	22N01022	Multi-Purpose Rack Assembly (Includes items 6-11)
6)	--	Rack Frame
7)	--	Rack Plate
8)	--	Bracket Assembly
9)	--	Solenoid
10)	19N00433	Holder Pad Assembly
11)	--	Paper Empty Sensor

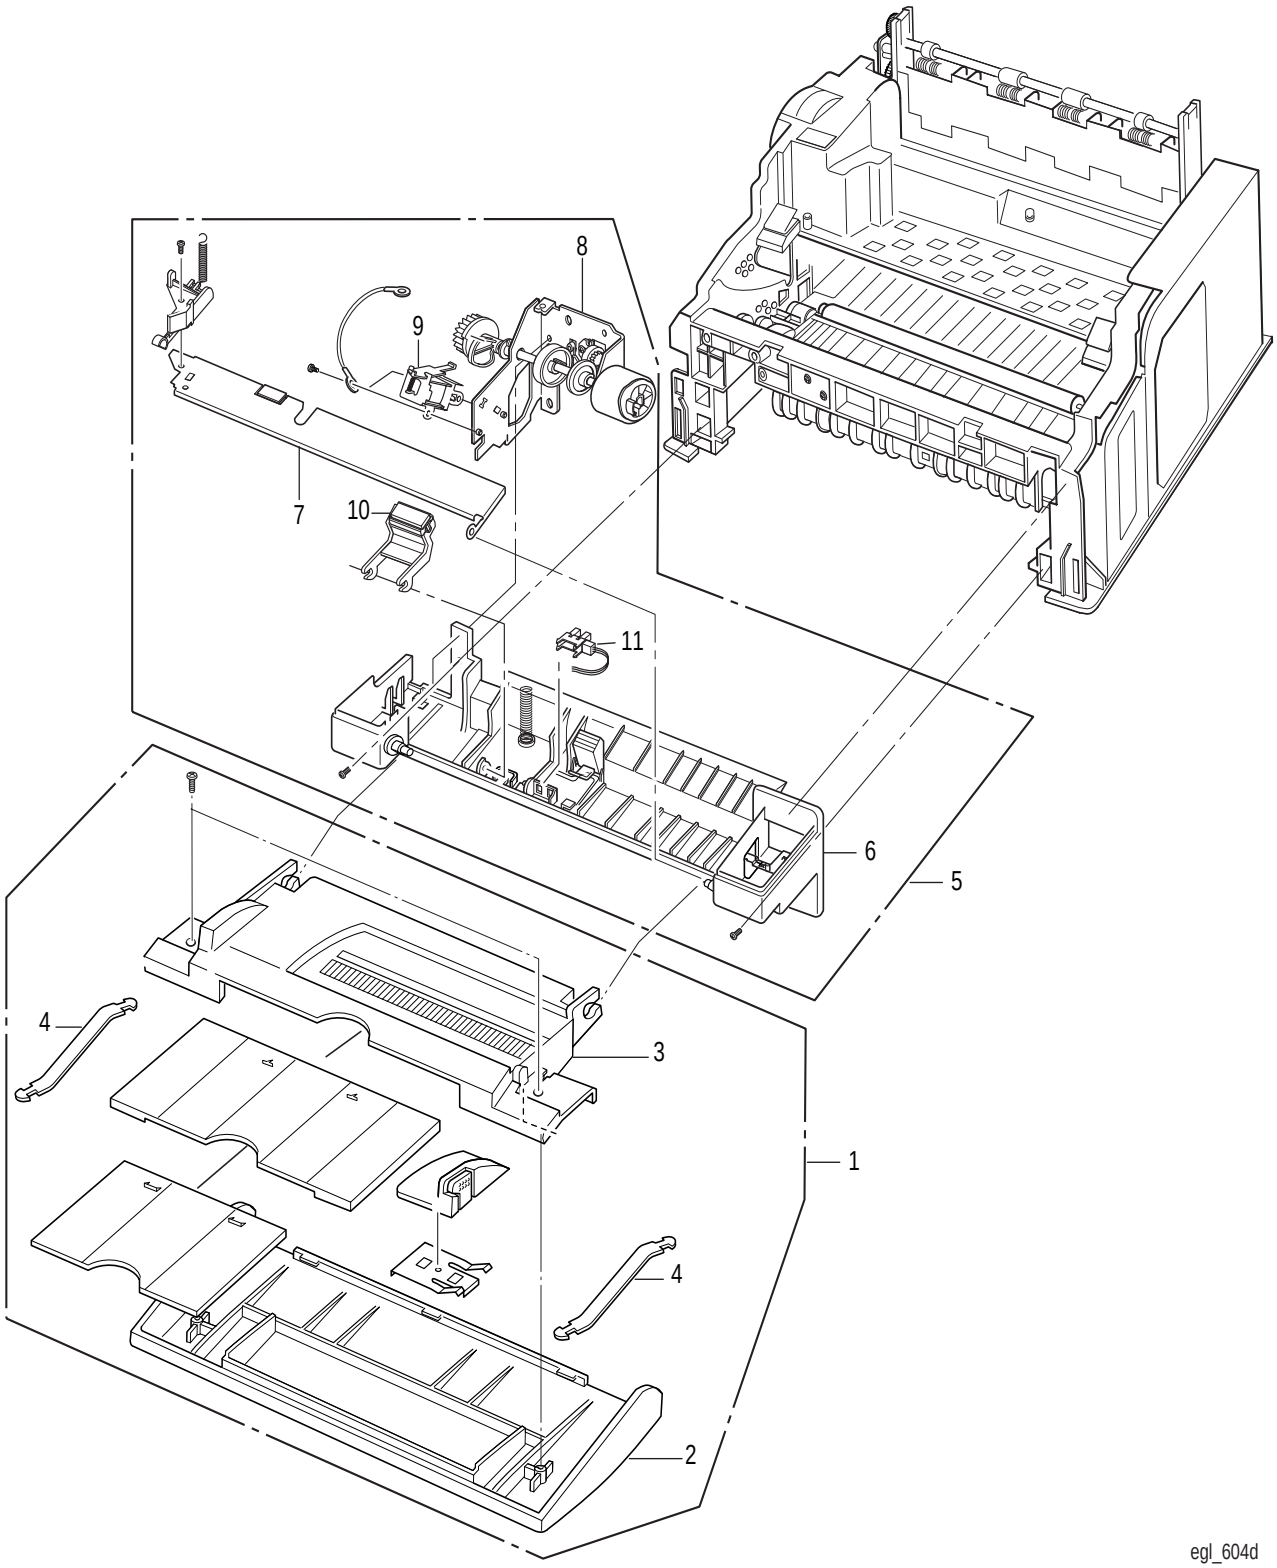
8
9
7
10
11
6
5
4
3
1
4
2
egl_604d

PL 4 Laser Assembly, Exit Assembly, Print Cartridge

Item	Part Number	Description
1)	113R00397	Print Cartridge (No Cycling Campaign)
	113R00398	Print Cartridge (Recycling Campaign)
2)	123N00185	Erase Lamp
3)	122N00138	Laser Assembly
4)	--	Fuser Guide
5)	2N01618	Exit Housing Assembly (Includes items 6-8)
6)	--	Exit Roll
7)	--	Exit Roller
8)	--	Exit Housing
9)	7N00775	Exit Gear/Bracket Assembly

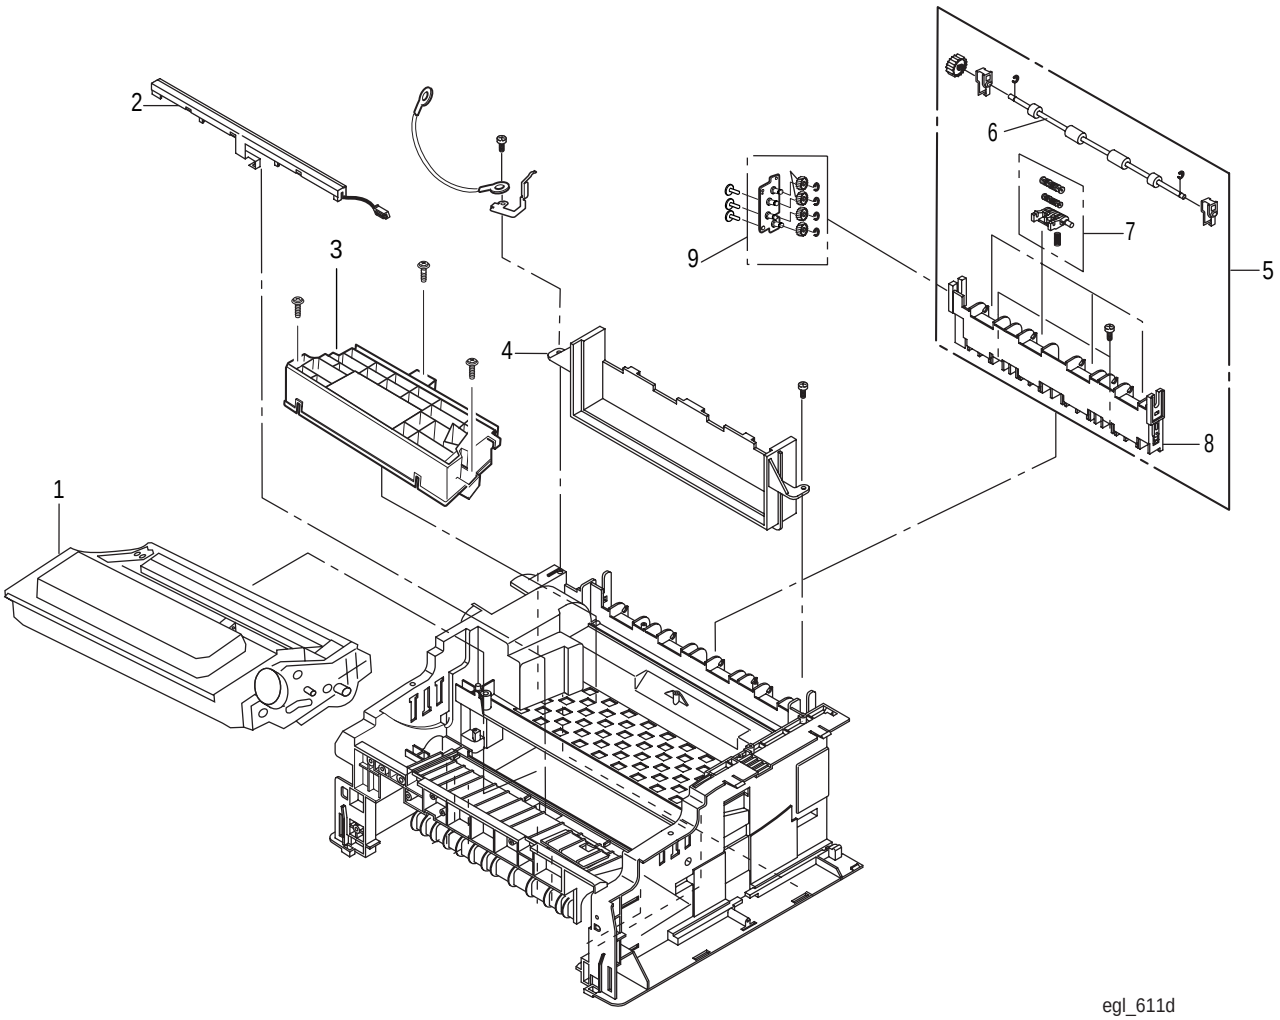
1
2
3
4
5
6
7
8
9
egl_611d

PL 5 Fuser Assembly

Item	Part Number	Description
1)	126N00089	Fuser Assembly (110V)(Includes items 2-8)
	126N00090	Fuser Assembly (220V)(Includes items 2-8)
2)	130N00901	Thermostat
3)	--	Fuser Harness
4)	130N00902	Thermistor
5)	122N00139	Halogen Lamp (110V)
	122N00140	Halogen Lamp (220V)
6)	--	Exit Roll
7)	--	Pressure Roll
8)	--	Heat Roll
9)	126N00088	Exit Actuator

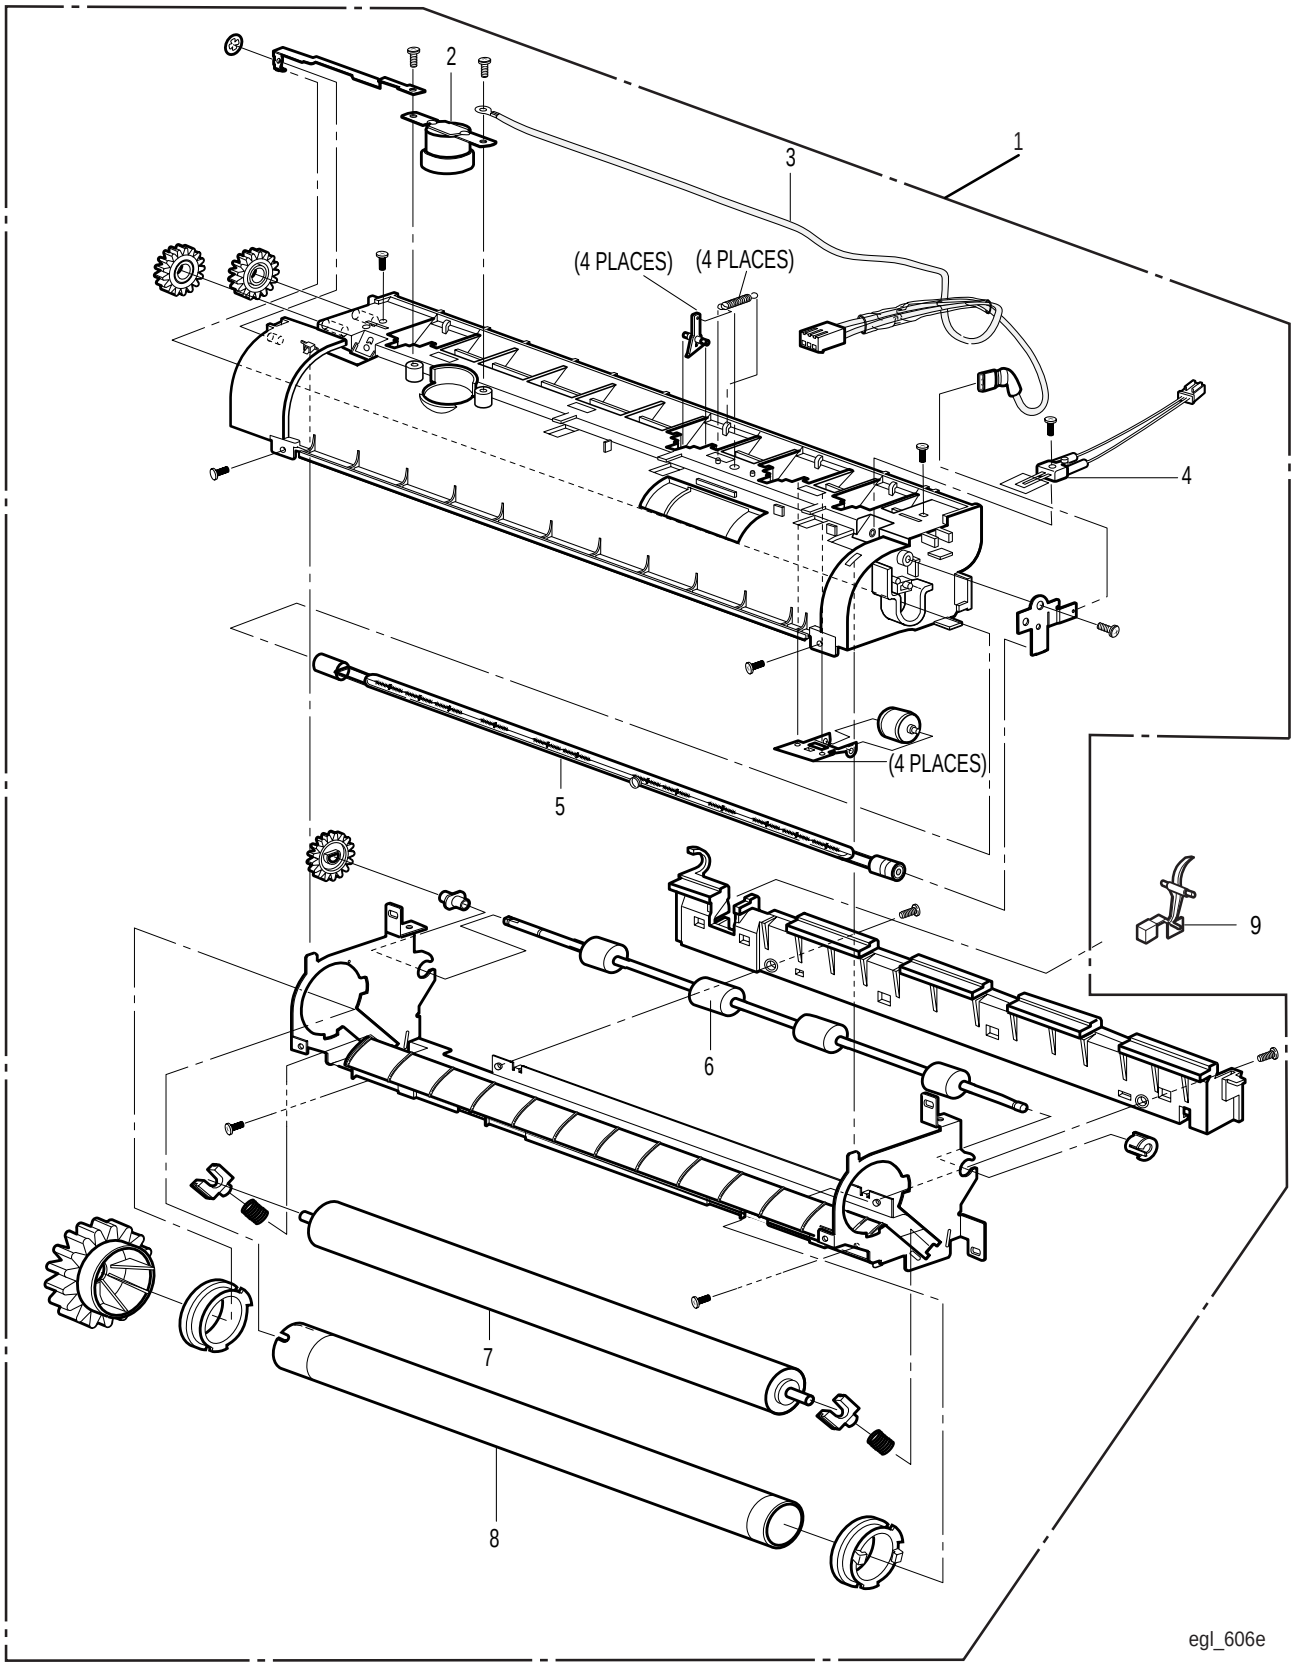
1
2
3
(4 PLACES)
(4 PLACES)
4
5
(4 PLACES)
6
7
8
9
egl_606e

PL 6 Main Drive Assembly

Item	Part Number	Description
1)	5N00619	Main Drive Assembly

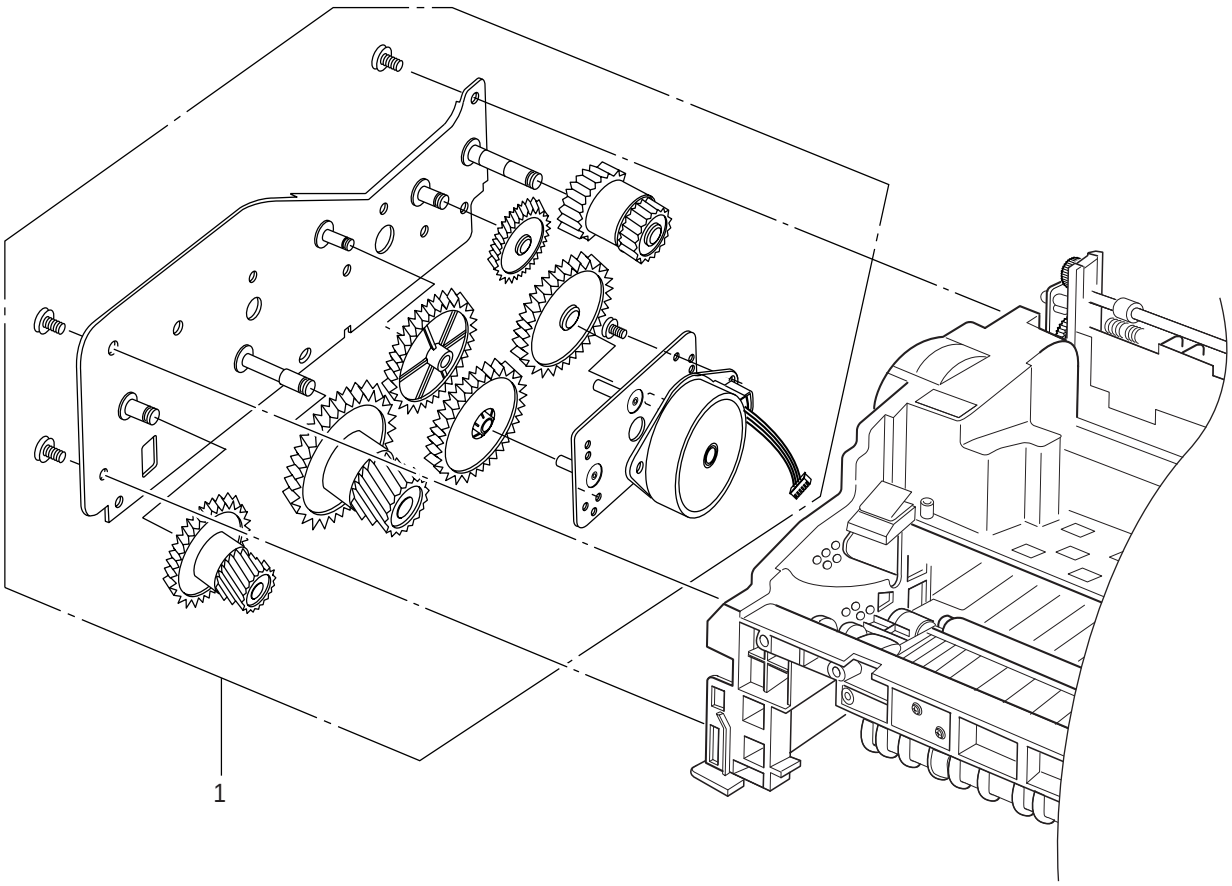
1
egl_605e

PL 7 Systems Controller and Electronics

Item	Part Number	Description
1)	140N05247	Engine PWB (110V)(Includes Item 3-4)
	140N05251	Engine PWB (220V)(Includes Item 3-4)
2)	--	Engine PWB Frame
3)	108N00398	Fuse
4)	108N00397	Fuse (110V)
	108N00399	Fuse (220V)
5)	140N05246	Motor Drive PWB
6)	--	SMPS Shield
7)	140N05248	Systems Controller PWB (110V)
	140N05250	Systems Controller PWB (220V)
8)	--	Memory Simm
9)	--	Postscript Simm (Option)
10)	--	Serial/Local Talk PWB (Option)
11)	--	Harness (to Engine Board)
12)	--	Harness (to LED Panel Board)

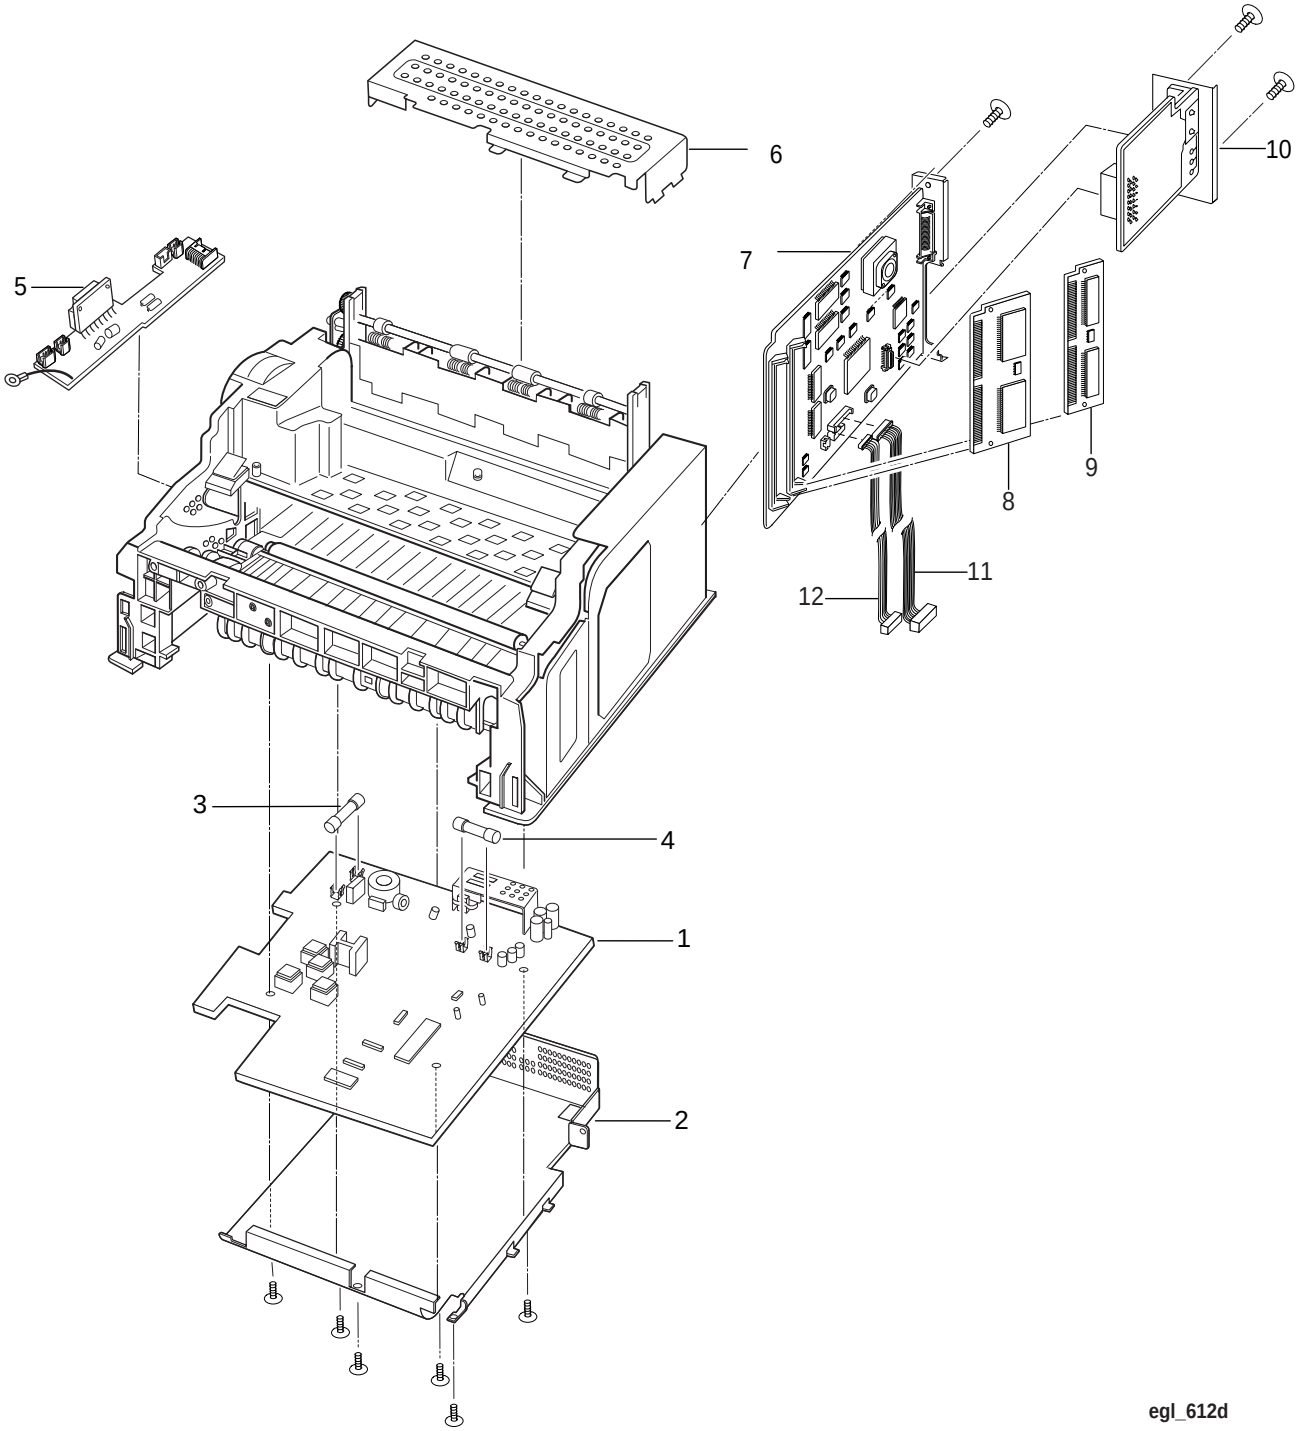
6
10
5
7
9
8
11
12
3
4
1
2
egl_612d

PL 8 Feeder Assembly (Bottom View)

Item	Part Number	Description
1)	130N00903	Feeder Assembly (Includes Items 2-4)
2)	130N00904	Feeder Rubber (2 per order)
3)	130N00905	Feed Drive Roll
4)	--	Pickup Gear
5)	--	Base Bracket (Right)
6)	--	Base Bracket (Left)
7)	--	Ground Plate

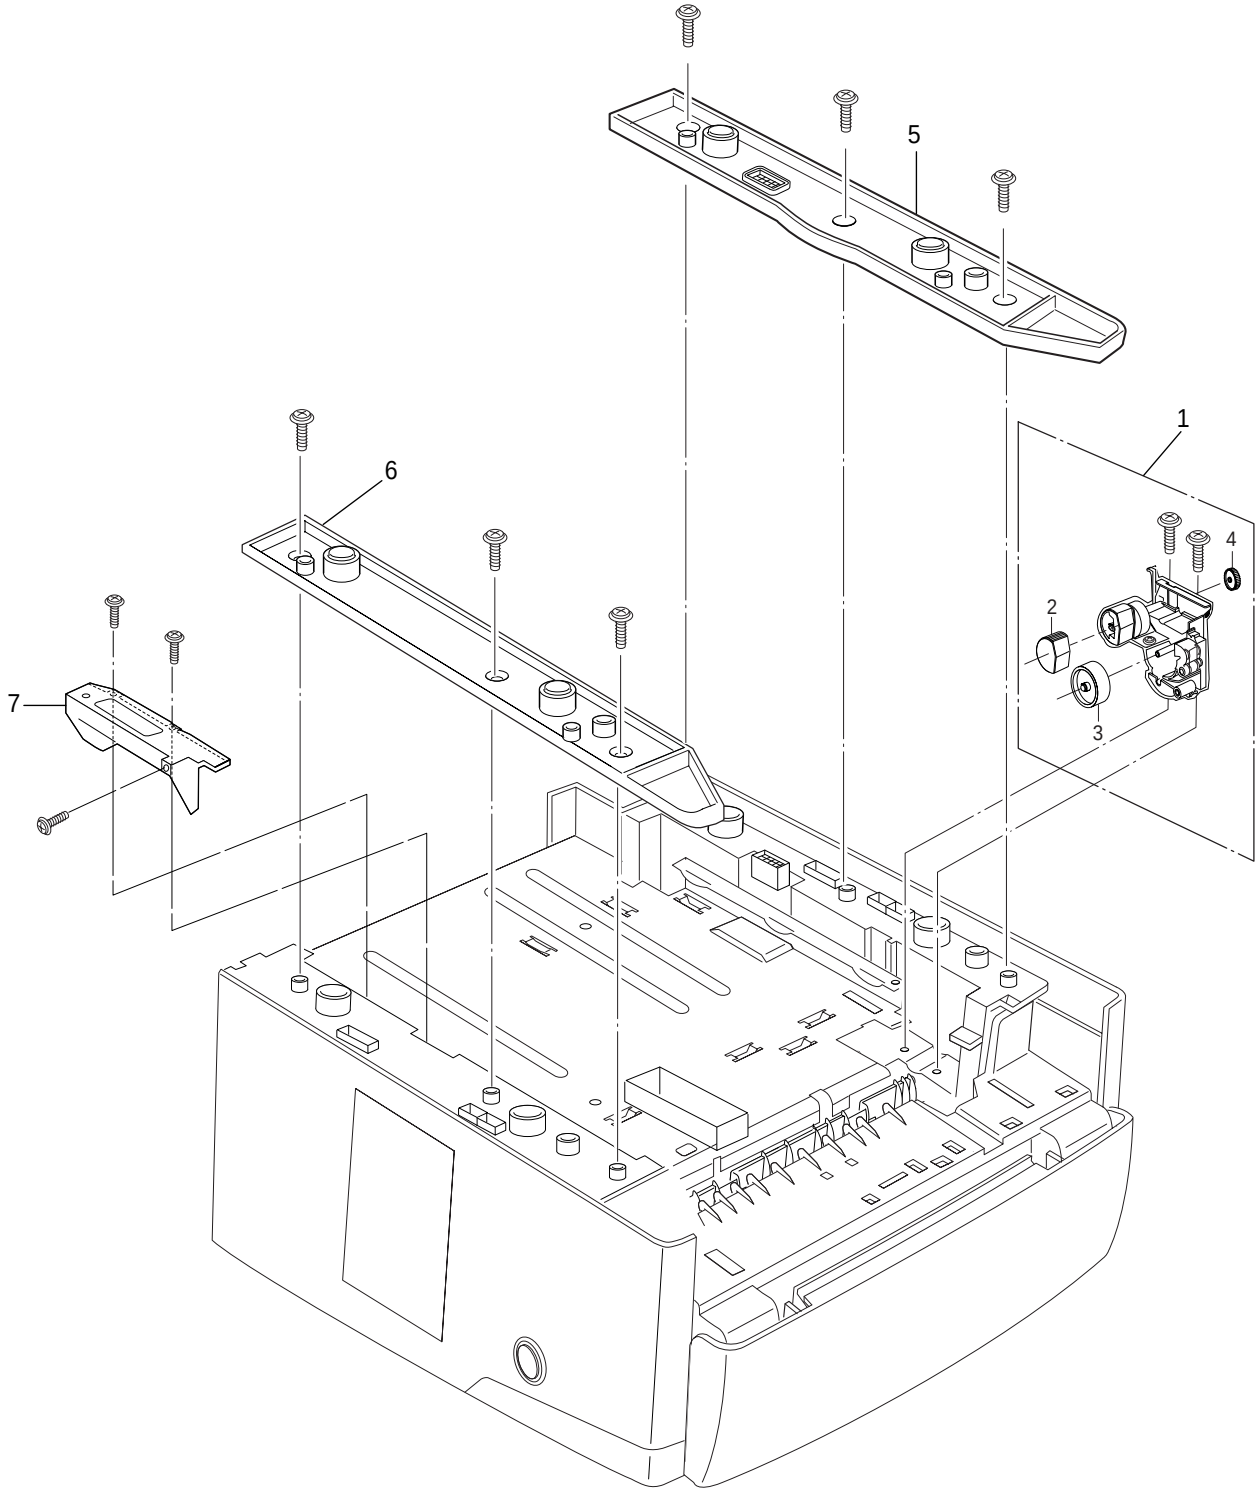

egl_607d

PL 9 Paper Tray, Upper

Item	Part Number	Description
1)	50N00278	Paper Tray (Includes Item 2)
2)	38N00286	Paper Guide

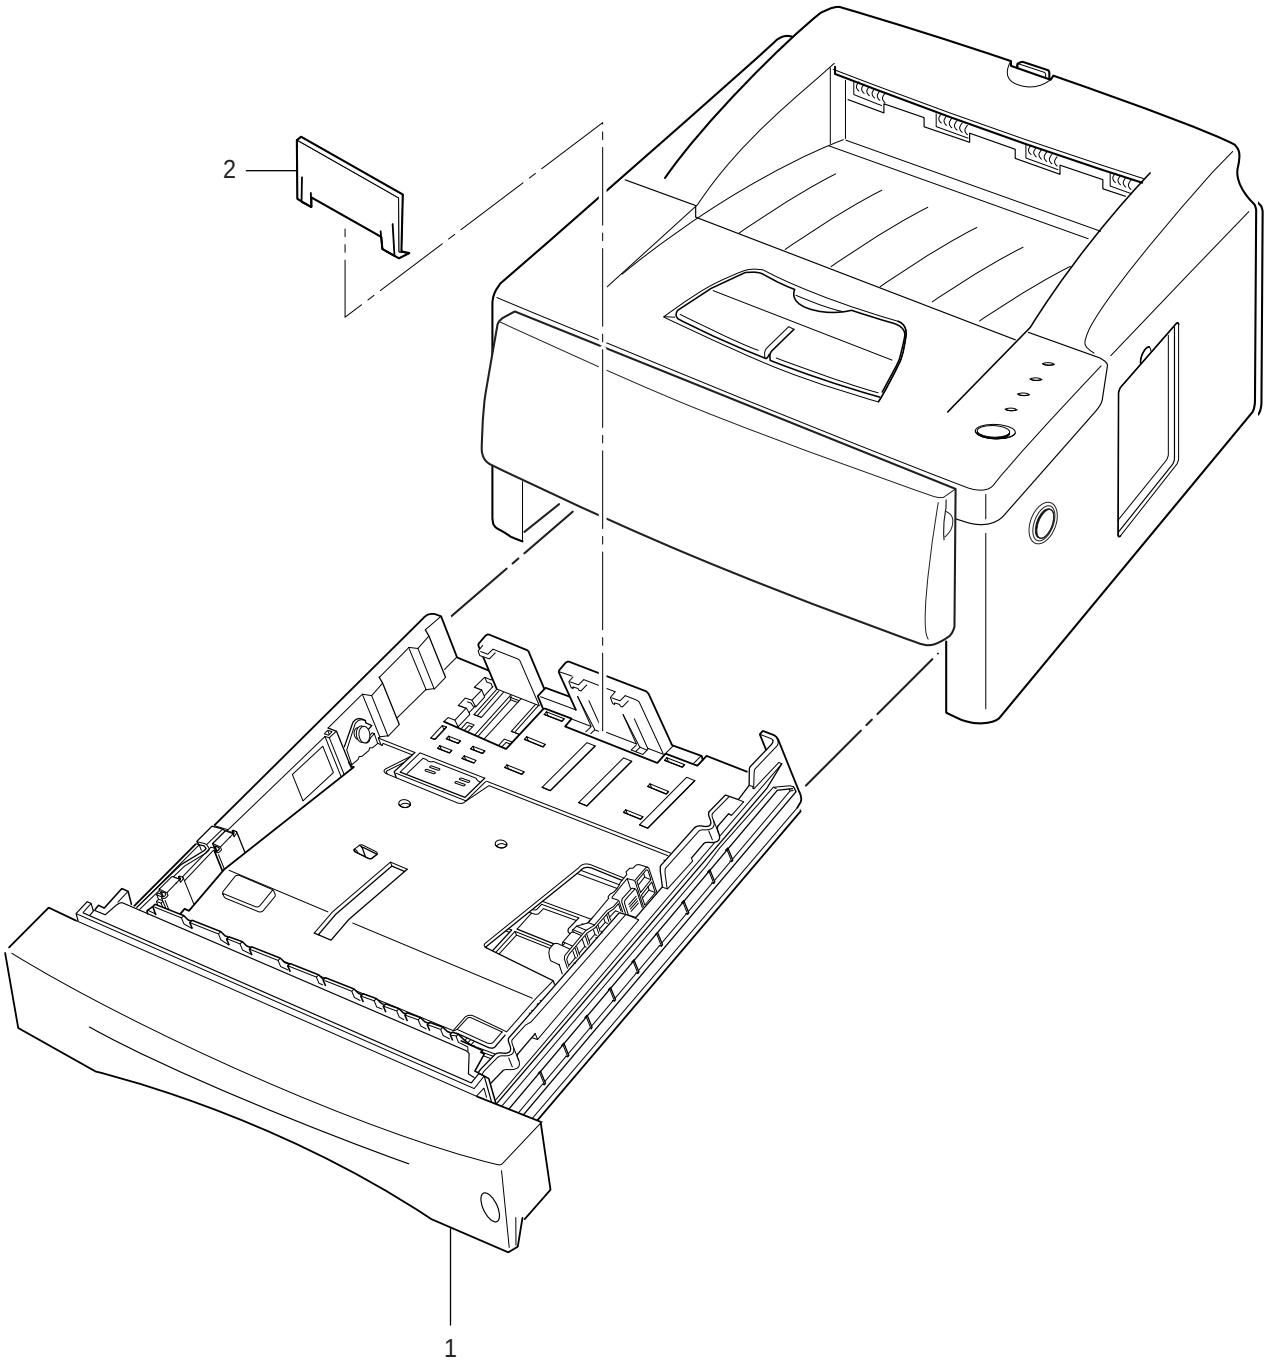

egl_608d

PL 10 Lower Paper Tray Frame and Paper Tray (Option)

Item	Part Number	Description
1)	--	Lower Paper Tray Frame (Includes items 2-18)
2)	22N01024	Inner Upper Roller
3)	--	Inner Upper Guide
4)	127N01007	Step Motor
5)	152N01669	Core Harness
6)	140N05249	Paper Tray Frame Main PWB
7)	--	Feeder Pickup Assembly (Includes Item 18)
8)	--	Left Frame Cover and Shield
9)	--	Right Frame Cover
10)	--	Rear Cover
11)	--	Upper Frame
12)	--	Lower Frame
13)	--	Arm Actuator
14)	--	Feeder Clutch Housing
15)	--	Solenoid
16)	--	Double Option Gear
17)	--	Harness
18)	--	Pickup Rubber
19)	--	Paper Tray (Includes Item 20)
20)	38N00286	Rear Guide

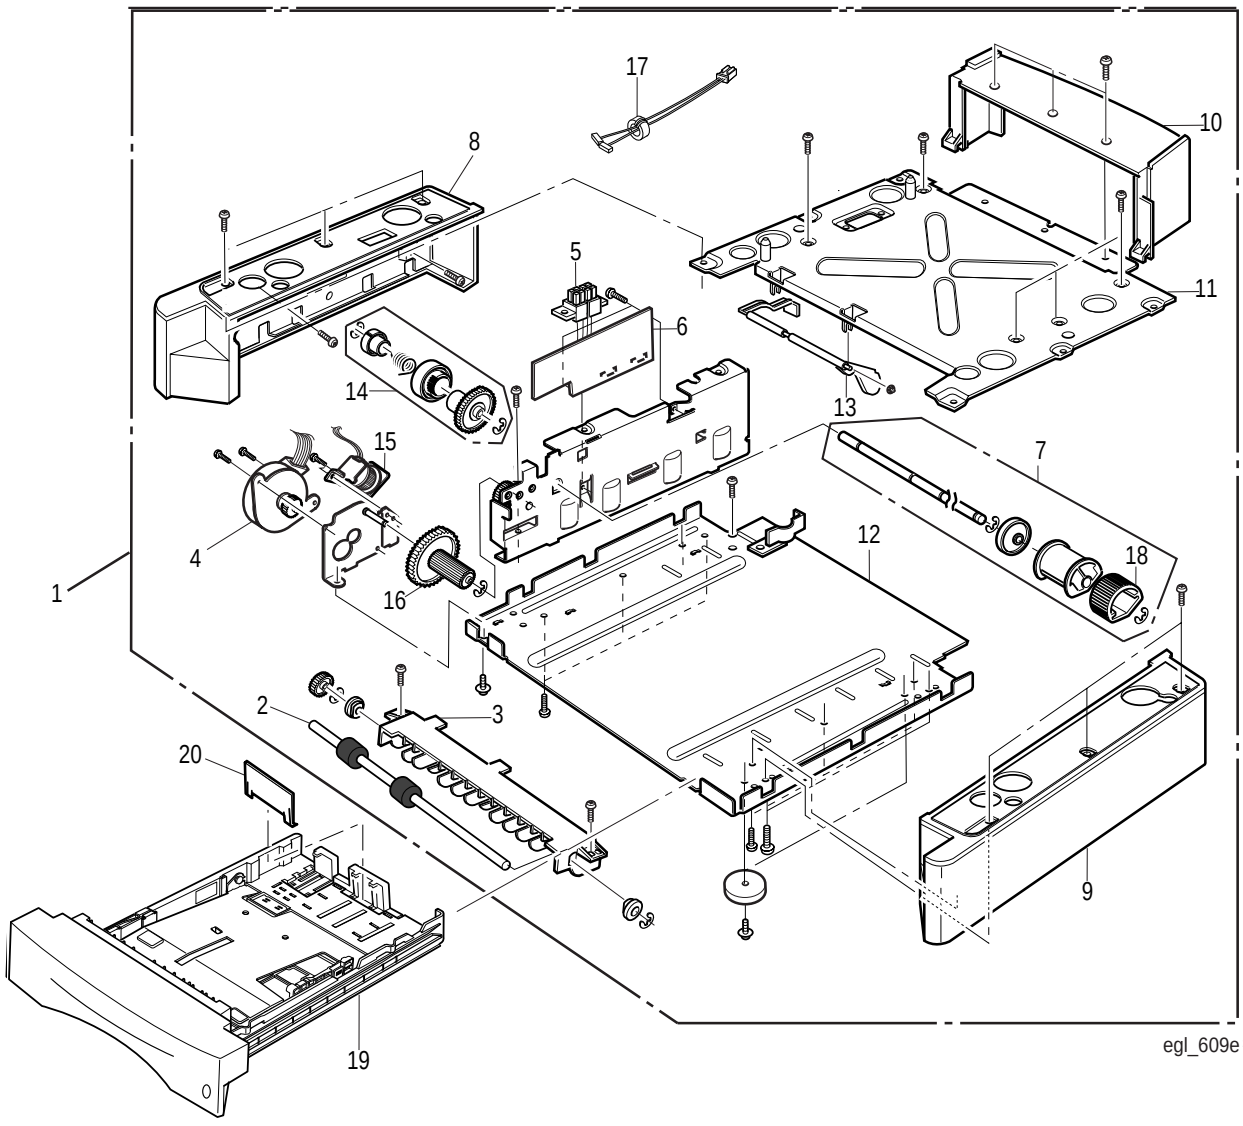
17
8
10
5
11
6
14
13
15
7
4
12
18
16
1
2
3
20
9
19
egl_609e

Kits, Tools, and Supplies

Kits and Tools

Item	Part Number	Description
1)	600T80138	Anacom G80
2)	600T80340	Diagnostic Control Unit
3)	600T80345	DCU Overlay Kit
4)	600K72020	Hardware Kit
5)	600T01653	High Voltage Probe

Supplies

Item	Part Number	Description
1)	35P01538	Cleaning Cloth (treated)
2)	600S04372	Cleaning Pads
3)	35P02162	Cotton Swabs
4)	99P03082	Disposable Gloves
5)	99P03023	Disposable Plastic Bags
6)	5P01737	Drop Cloth
7)	43P00045	Film Remover
8)	43P00048	Formula A Cleaner
9)	63P00560	Glue Capsule
10)	600S04653	Polyurethane Pads
11)	35P03191	Towel (heavy duty)

Supplies (XL Xerox)

Item	Part Number	Description
1)	8R90175	Cleaner
2)	600S04372	Cleaning Pad Kit
3)	8R90019	Cloth
4)	43P00083	Fuser Cleaning Solvent Pads
5)	8R90176	General Cleaning Solvent
6)	8R90177	Lens Cleaner